





# EIC Compton laser

Ciprian Gal, Abhay Deshpande, Dave Gaskell,  
Caryn Palatchi, Kent Paschke, Shukui Zhang

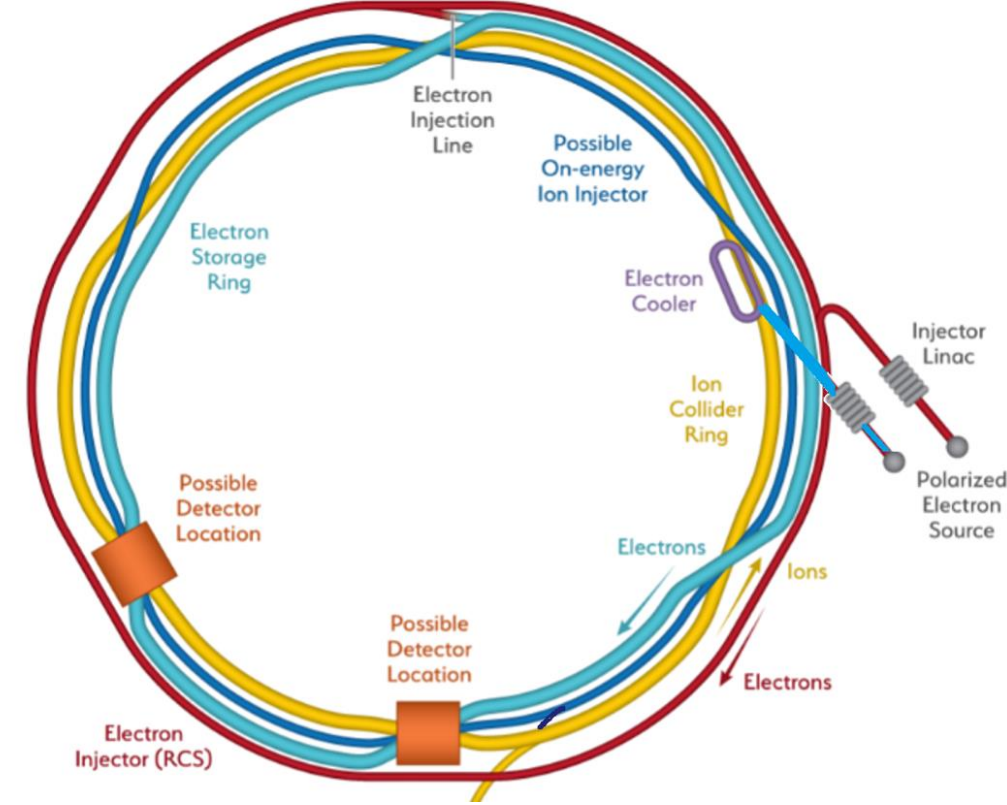

# e-Polarimetry at the EIC

At the IP12 location beam will be fully transverse

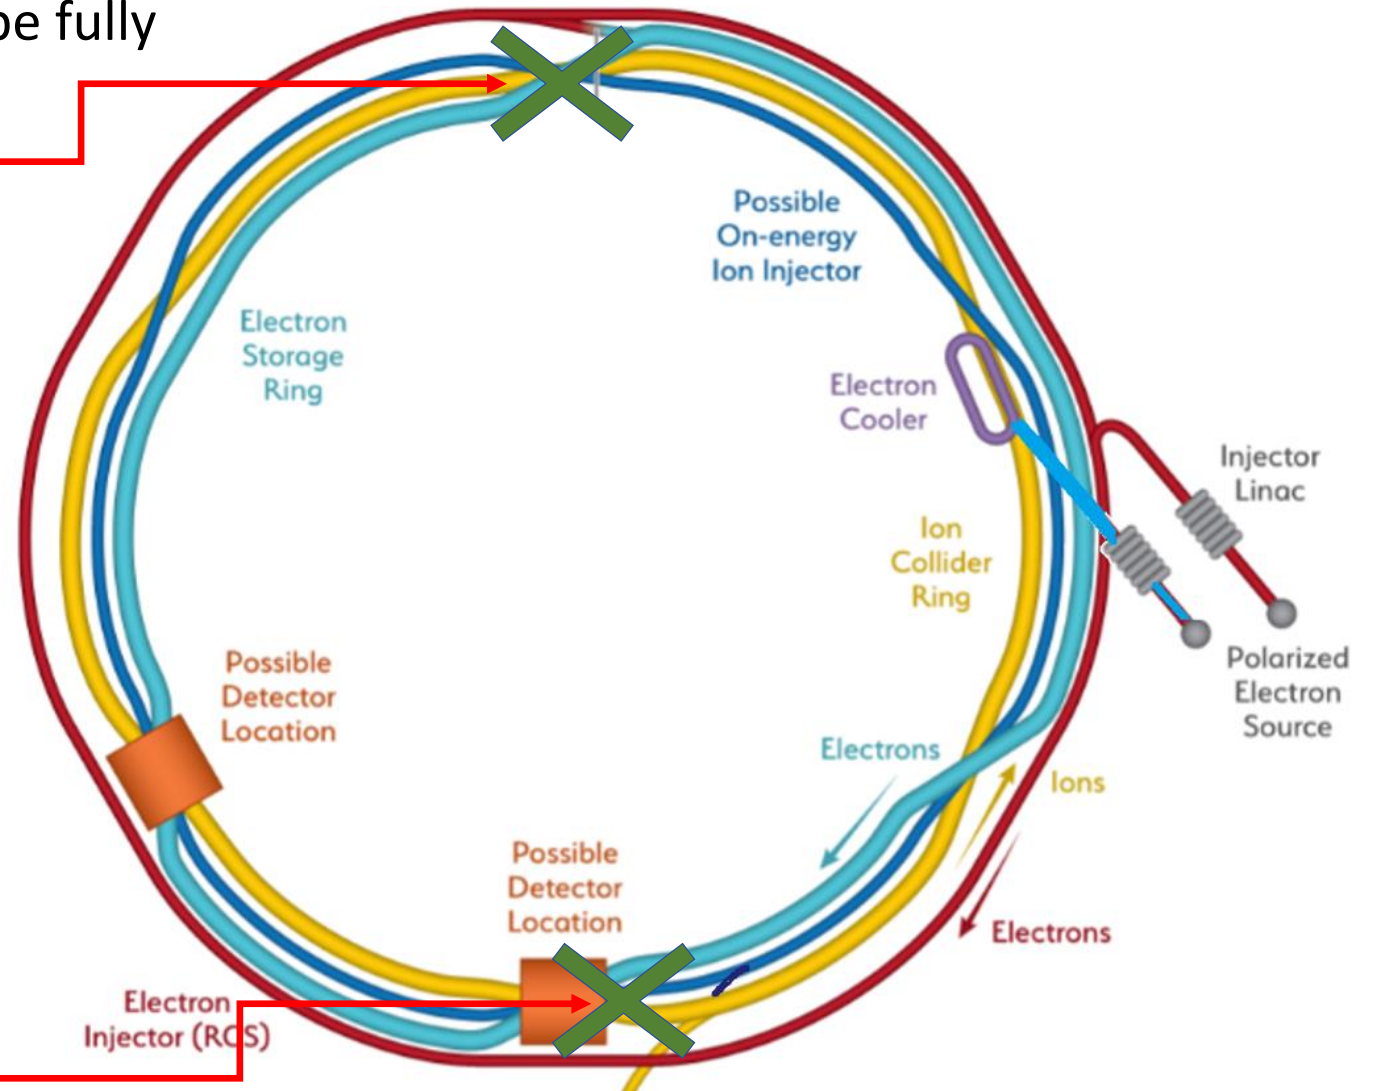

Close to the experimental IR it will be a mix (mostly longitudinal)

# e-Polarimetry requirements for the EIC



## Fast

- At 18 GeV bunches will be replaced every 2 min
  - A full polarimetry measurement needs to happen in a shorter time span
- The amount of electrons per bunch is fairly small  $\sim 24$  nC
  - will need bright laser beam to obtain needed luminosity
- A fast polarimeter will allow for faster machine setup

## Precise

- Distance between buckets is  $\sim 10$  ns (@5,10 GeV)
  - bunch by bunch measurement cannot be done with a CW laser without very fast detectors
- For systematic studies we would like to have the ability to either measure a single bunch ( $\sim 78$  kHz) or have interactions with all 1160 (260) bunches at 10 and 5 GeV (18 GeV)
- Backgrounds needs to be under control
- Laser polarization needs to be known to a high degree

# Compton scattering basics

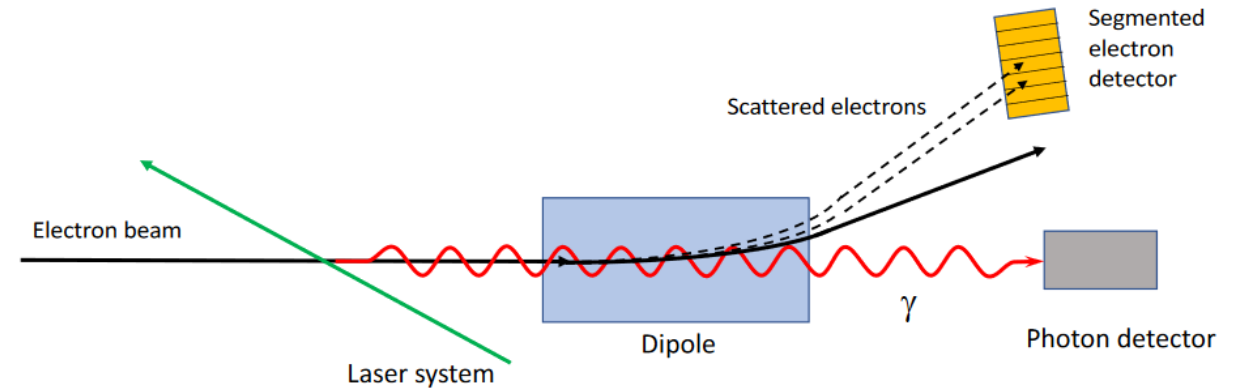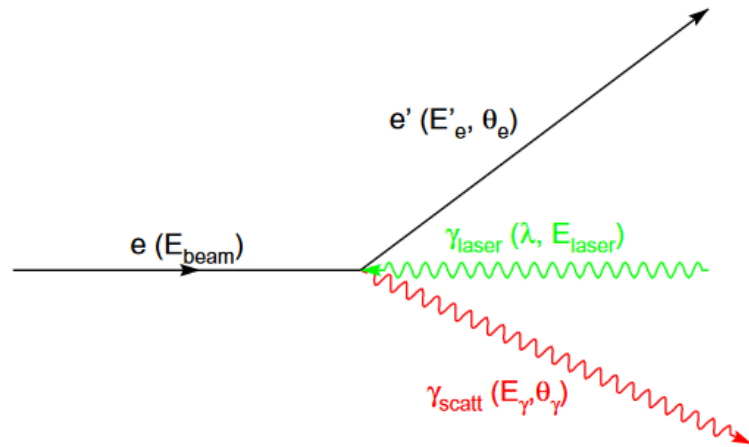

- Polarized photon-electron scattering
- Potential to measure redundantly with scattered photon and electron
- Fully QED calculable analyzing power
- Interactions happen with a small fraction of the beam particles leaving it undisturbed
  - Monitoring can be performed in real time during actual data taking

# Compton polarimeters through history

Polarimeter	Energy	Total Sys. Uncertainty	Type of laser	Measurement type
CERN LEP (T)	46 GeV	5%	~10s Hz pulsed Nd:YAG (532nm): 50 -100 W	Multi-photon
HERA (T)	27 GeV	1.9%	CW 10W (514.5nm) Argon	Single-photon
HERA (L)	27 GeV	1.6%	100Hz pulsed 10W Nd:YAG (532nm)	Single/Multi-photon
HERA (L)	27 GeV	1%	CW cavity 3 kW,	Single-photon
SLD at SLAC (L)	45.6 GeV	0.5%	17 Hz pulsed ?? W Nd:YAG (532nm)	Multi-photon
JLab Hall A (L)	1-6 GeV	1-3%	CW cavity 3.7 kW Nd:YAG (532nm)	Single/Multi-photon
JLab Hall C (L)	1.1 GeV	0.6%	CW cavity 1.7 kW Nd:YAG (532nm)	Single/Multi-photon

- Beyond LEP there were quite a few transverse polarimeters around the world that were used for beam diagnostics (an absolute polarization was not in the plan)
- Pulsed lasers generally tend to give more interactions per crossing so a multi-photon (or integrating) method was employed

# e-Polarimetry requirements for the EIC

## Fast

- At 18 GeV bunches will be replaced every 2 min
  - A full polarimetry measurement needs to happen in a shorter time span
- The amount of electrons per bunch is fairly small  $\sim 24$  nC
  - will need bright laser beam to obtain needed luminosity
- A fast polarimeter will allow for faster machine setup


## Precise

- Distance between buckets is  $\sim 10$  ns (@5,10 GeV)
  - bunch by bunch measurement cannot be done with a CW laser without very fast detectors
- For systematic studies we would like to have the ability to either measure a single bunch ( $\sim 78$  kHz) or have interactions with all 1160 (260) bunches at 10 and 5 GeV (18 GeV)
- Backgrounds needs to be under control
- Laser polarization needs to be known to a high degree




# Compton scattering basics

$$A_{\text{long}} = \frac{\sigma^{++} - \sigma^{-+}}{\sigma^{++} + \sigma^{-+}} = \frac{2\pi r_o^2 a}{(d\sigma/d\rho)} (1 - \rho(1+a)) \left[ 1 - \frac{1}{(1 - \rho(1-a))^2} \right]$$

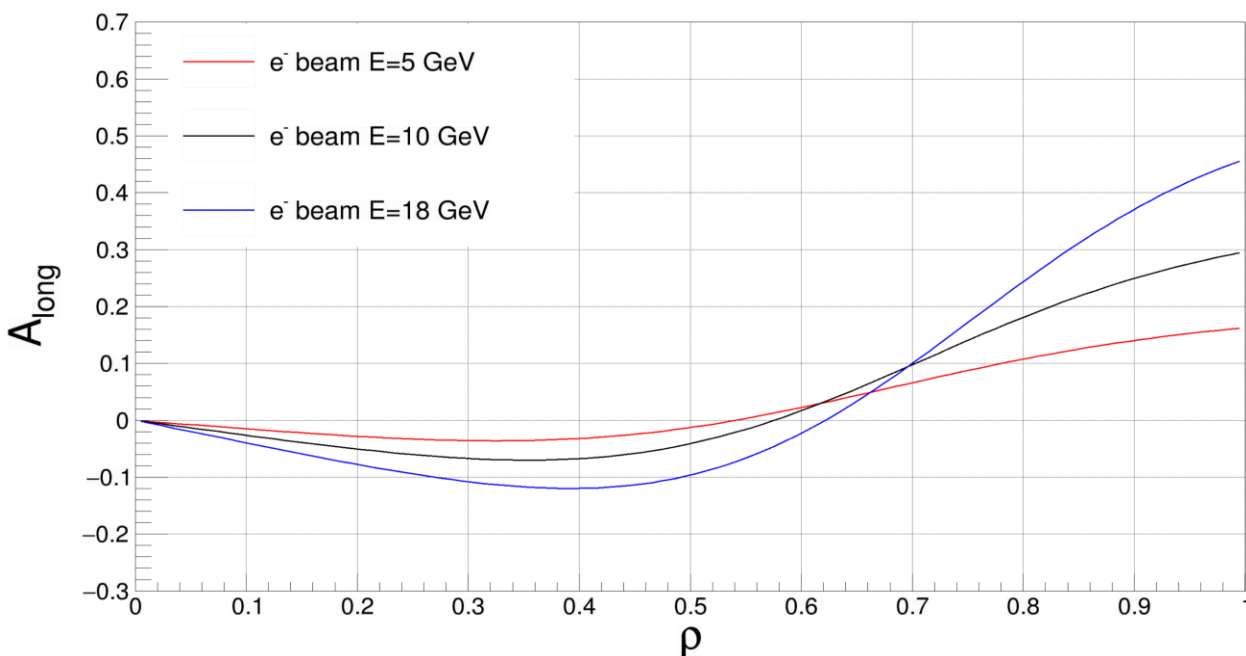

- Calculations based on 532nm laser system
- For both the longitudinal and transverse polarimetry measurements at the energies of interest for the EIC the analyzing powers are significant

$$A_{\text{tran}} = \frac{2\pi r_o^2 a}{(d\sigma/d\rho)} \cos \phi \left[ \rho(1-a) \frac{\sqrt{4a\rho(1-\rho)}}{(1 - \rho(1-a))} \right]$$

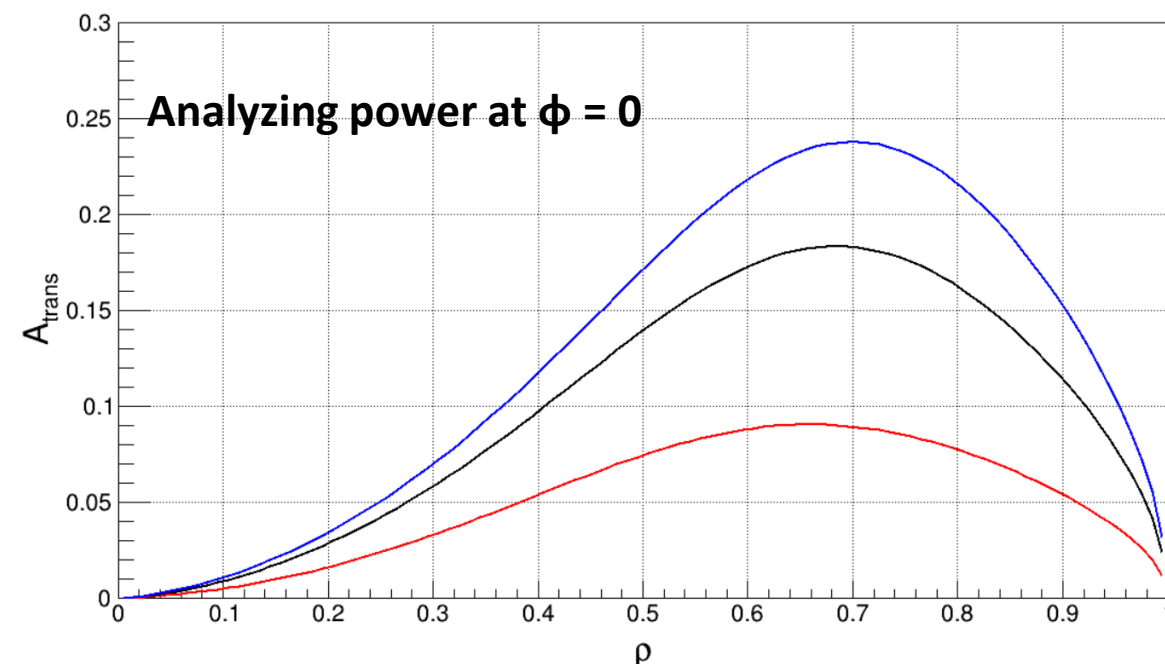


$$E_\gamma \approx E_{\text{laser}} \frac{4a\gamma^2}{1 + a\theta_\gamma^2 \gamma^2}, \quad a = \frac{1}{1 + 4\gamma E_{\text{laser}}/m_e}.$$



$$E_\gamma^{\text{max}} = 4aE_{\text{laser}}\gamma^2, \quad \rho = E_\gamma/E_\gamma^{\text{max}}$$

# Transverse polarization

$$A_{\text{tran}} = \frac{2\pi r_o^2 a}{(d\sigma/d\rho)} \cos \phi \left[ \rho(1-a) \frac{\sqrt{4a\rho(1-\rho)}}{(1-\rho(1-a))} \right]$$

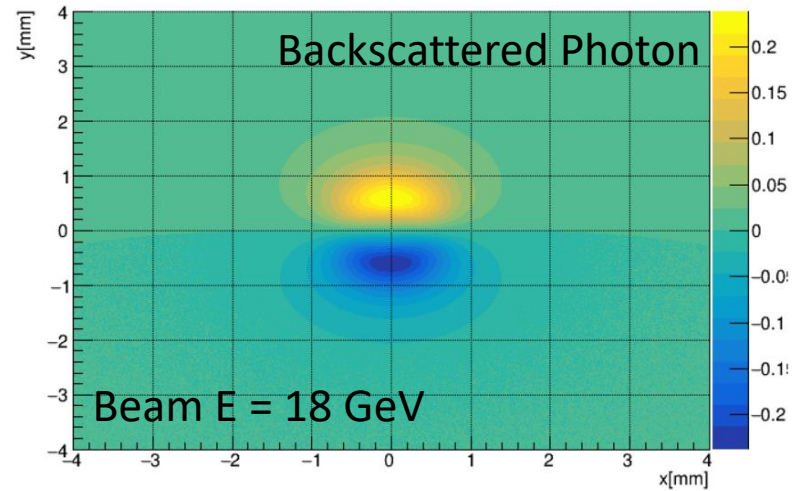

electron polXsec z=25000 mm

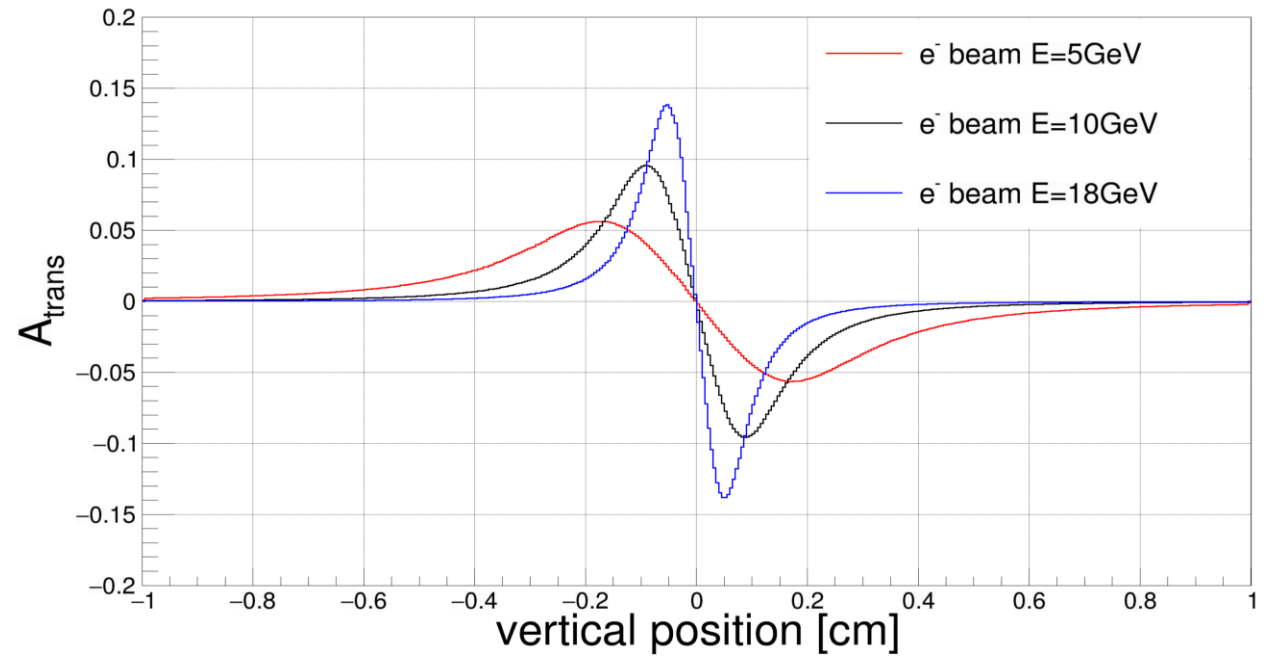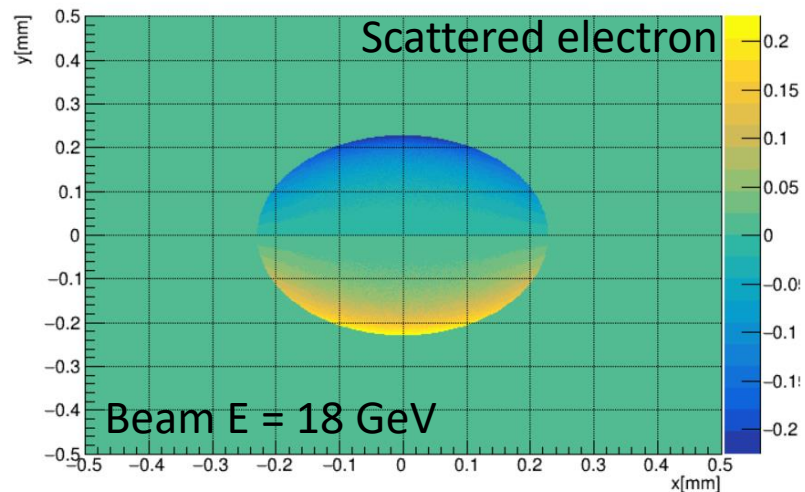

- Asymmetry is usually measured with respect to the vertical axis
  - The scattered electron reaches the largest analyzing power at large scattering angles
- The higher the energy the tighter the collimation of the scattered photons will be
  - This leads to significant constraints on detector segmentation



# Luminosity calculations for individual bunches

$$N_{Compton} = \frac{\mathcal{L} \cdot \sigma_{unpol}}{f_{beam}}$$

$$t_{meth} = \left( \mathcal{L} \sigma_{Compton} P_e^2 P_\gamma^2 \left( \frac{\Delta P_e}{P_e} \right)^2 A_{meth}^2 \right)^{-1}$$

*G. Bardin, et al., Conceptual design report of a compton polarimeter in cebaf hall a, JLab Internal note.*

- Assuming one scattered particle per bunch would allow us to calculate the luminosity needed and a time estimate for how long it would take to reach a 1% statistical precision



Beam energy [GeV]	Unpol Xsec[barn]	AN	t[s]	t[min]	L [1/(barn*s)]
5	0.569	0.029	210	3.5	1.37E+05
10	0.503	0.050	72	1.2	1.55E+05
18	0.432	0.075	31	0.5	1.81E+05

- For all configurations envisioned for the EIC (5-18 GeV) the luminosity requirements are on the level of few 1/(barn\*s)
- The times needed to the needed statistics for the signal are on the level 30s at 18 GeV
  - Lower energies are less of a concern due to the longer lived stores
  - This would allow for simultaneous measurement of all bunches (given a fast detector)

# Luminosity calculations for individual bunches

$$\mathcal{L} = f_0 N_1 N_2 \frac{\cos(\theta/2)}{2\pi} \frac{1}{\sqrt{(\sigma_{x,1}^2 + \sigma_{x,2}^2)}} \times \frac{1}{\sqrt{(\sigma_{y,1}^2 + \sigma_{y,2}^2) \cos^2(\theta/2) + (\sigma_{z,1}^2 + \sigma_{z,2}^2) \sin^2(\theta/2)}} \quad (1)$$

S. Verdu-Andres (CAD): <https://www.bnl.gov/isd/documents/95396.pdf>

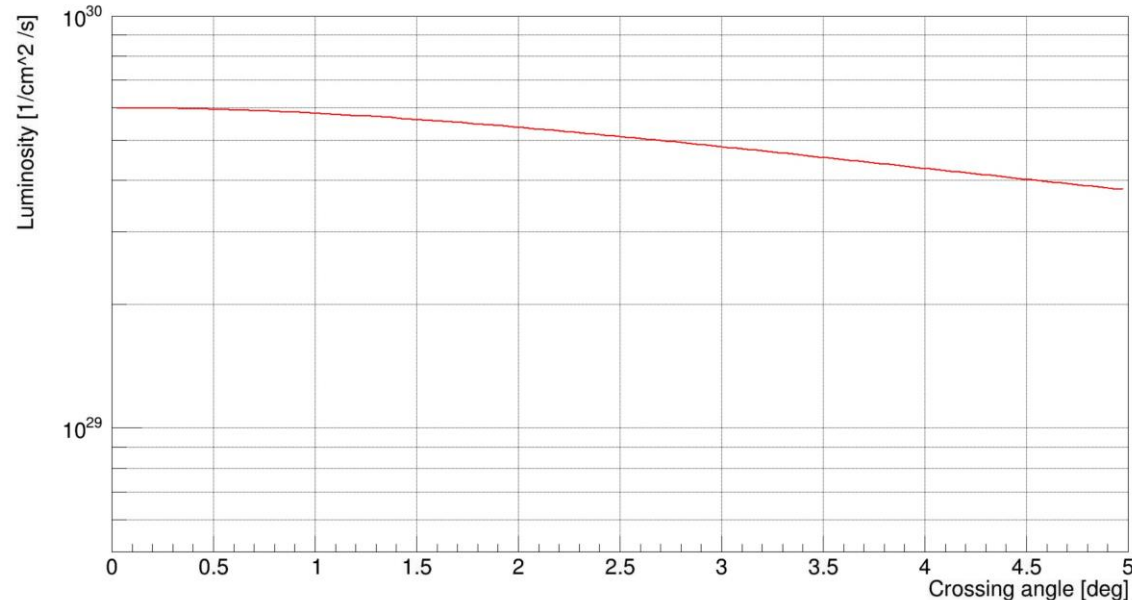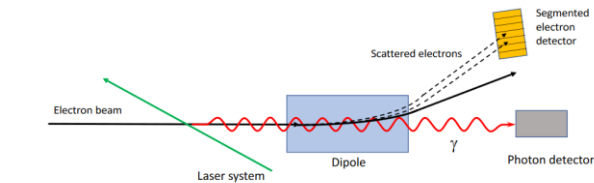

- The dependence of the luminosity of crossing angle needs to take into account the transverse profile of the beam and the length of the pulse
- The estimation on the left is made for a single pulse
- For a 10W 100MHz pulsed laser with a 12ps pulse can provide about  $6 \cdot 10^5$  1/(barn\*s) of luminosity
  - Comparing this to the single photon measurement luminosities shows that such a laser will be sufficient

# e-Polarimetry requirements for the EIC


## Fast

- At 18 GeV bunches will be replaced every 2 min
  - A full polarimetry measurement needs to happen in a shorter time span
- The amount of electrons per bunch is fairly small  $\sim 24$  nC
  - will need bright laser beam to obtain needed luminosity
- A fast polarimeter will allow for faster machine setup


## Precise

- Distance between buckets is  $\sim 10$  ns (@5,10 GeV)
  - bunch by bunch measurement cannot be done with a CW laser without very fast detectors
- For systematic studies we would like to have the ability to either measure a single bunch ( $\sim 78$  kHz) or have interactions with all 1160 (260) bunches at 10 and 5 GeV (18 GeV)
- Backgrounds needs to be under control
- Laser polarization needs to be known to a high degree


# HERA Transverse Polarimeter

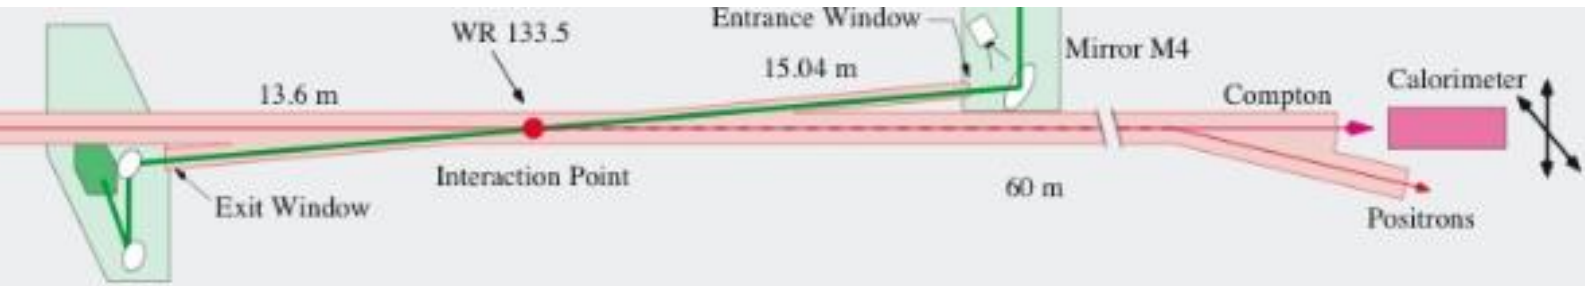


- Measurement extracted from an up-down energy asymmetry
- Chopper used for making background measurement
- Background measurements (and simulation cross checks) are very important to reach high precision
  - Beyond Compton scattering we need to measure beam only and laser “only” backgrounds (flexibility for the laser is crucial)
- Leading systematic was related to the detector
  - Systematics for laser were lower

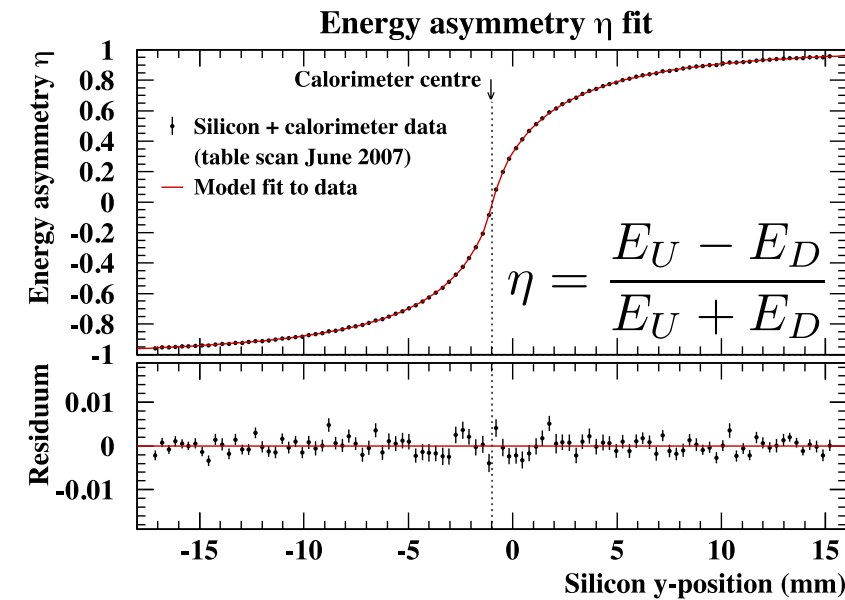


*B. Sobloher et al, DESY-11-259, arXiv:1201.2894*

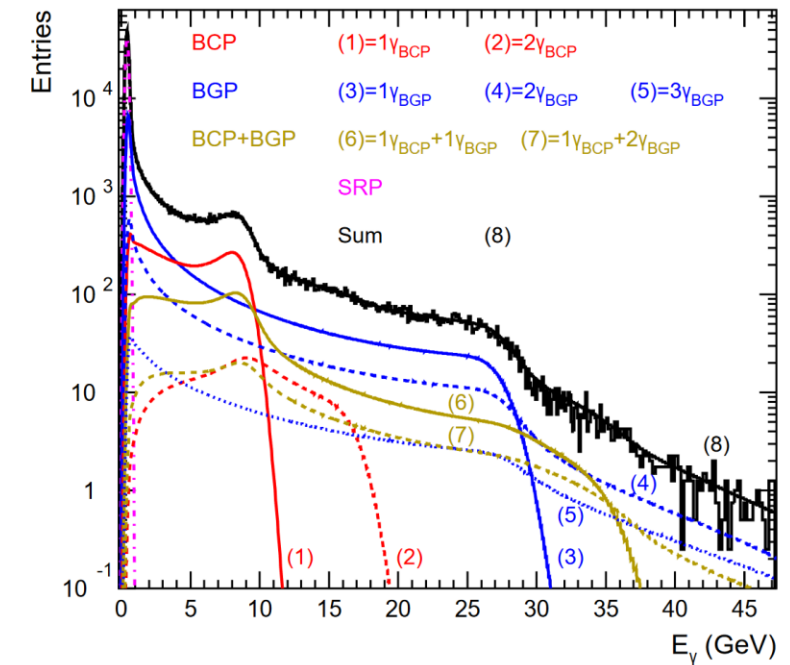

# Compton laser setup

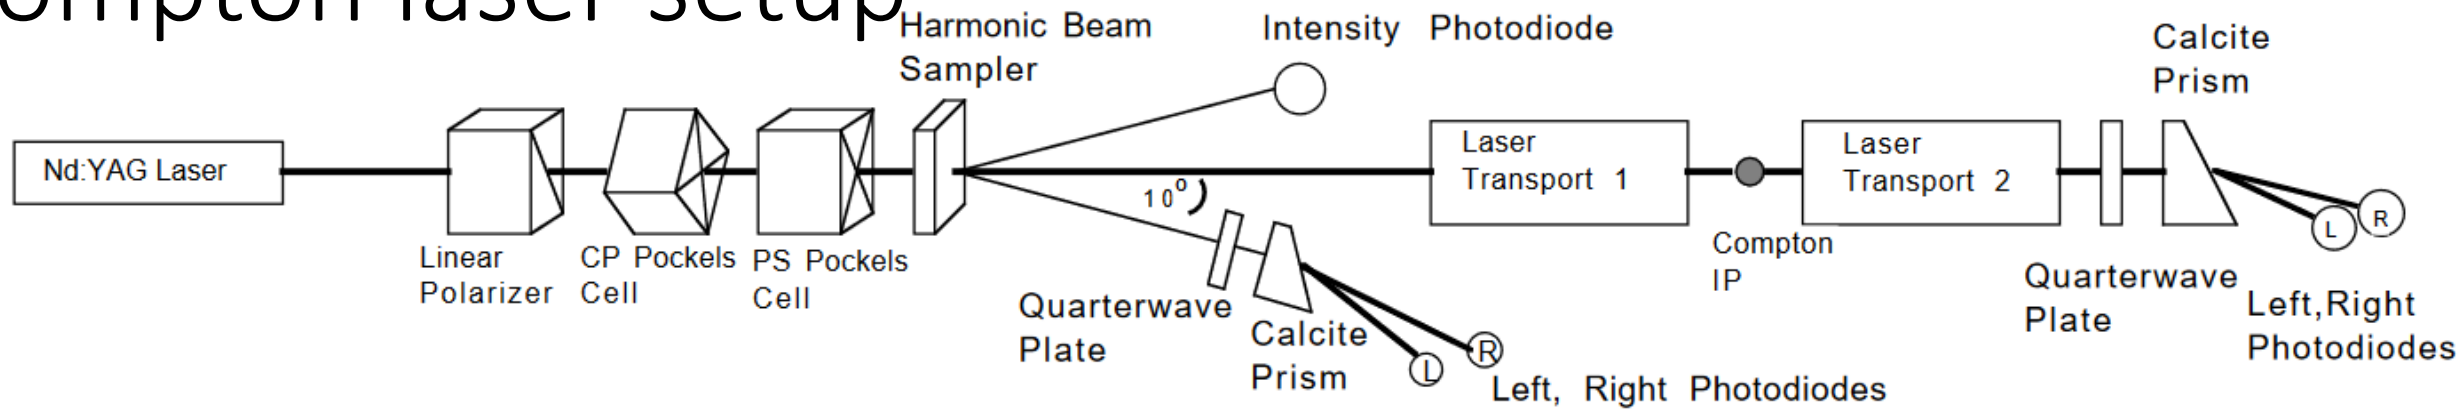


- The Compton laser systems are fairly standard
  - The SLD laser monitoring setup already had most of the tools we would need
- Scans performed with the PC during the experiment and data taking allowed for significantly reduced systematics related to the polarization state of the laser

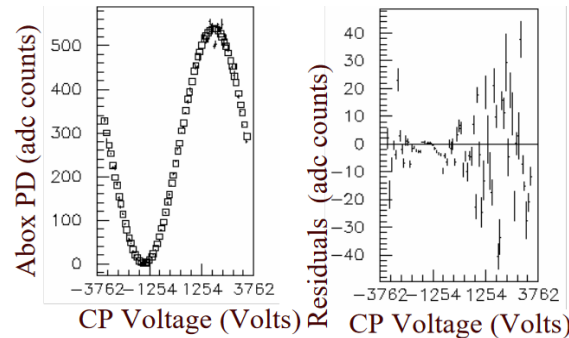


## LPSCANS

- done once per hour; readout photodiodes only
- ability to extinguish laser light after Helicity Filter determines polarization purity

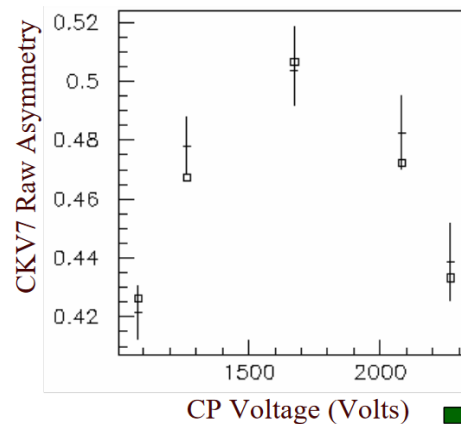

## ESCANS

- monitor phase shifts in laser Polarization with continuous Pockels cell scans
- only 1/3 of data is at nominal voltages

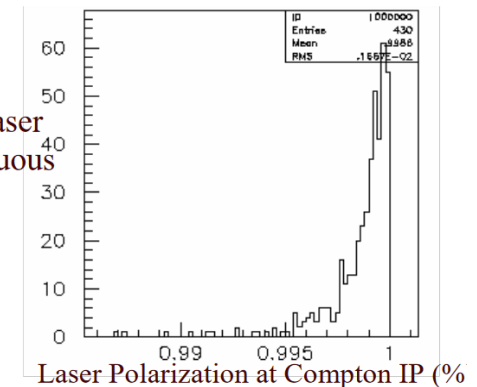


0.1% systematic error

M. Woods, SLAC

# DOCP through windows



- Typically the polarization is monitored through measurements of the transmitted laser light (after the IP)
- The “transfer function” can be measured on the bench but variations (such as tightening bolts or pulling vacuum) change the function making it unusable for the actual data taking
- Tests done with cavity at JLab showed that large differences in the degree of circular polarization can be obtained when straining the windows

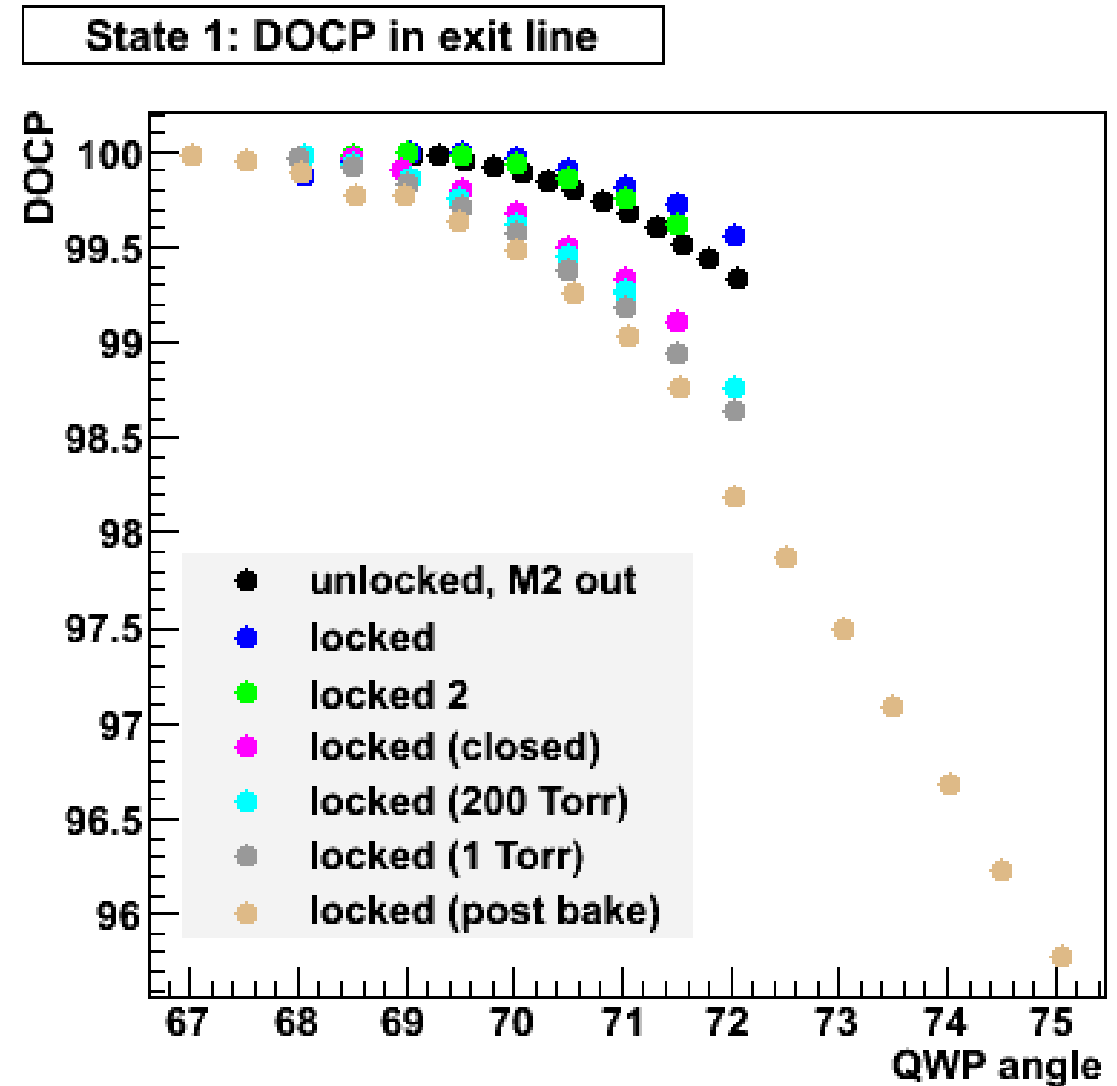




# Dealing with window birefringence

- In order to obtain circular polarization at the interaction point with the electron beam one can use the information obtained from the back-reflected light
  - In this case it would be off of mirror M1
- Using the optical reversibility theorem one can relate the amount of light reaching “PS” to the degree of circular polarization inside the cavity
  - M. Dalton and D. Jones showed this to be true in a setup at JLab
- By performing detailed scans of the half and quarter wave plates one can maximize the circular light at the IP and monitor it throughout the data taking

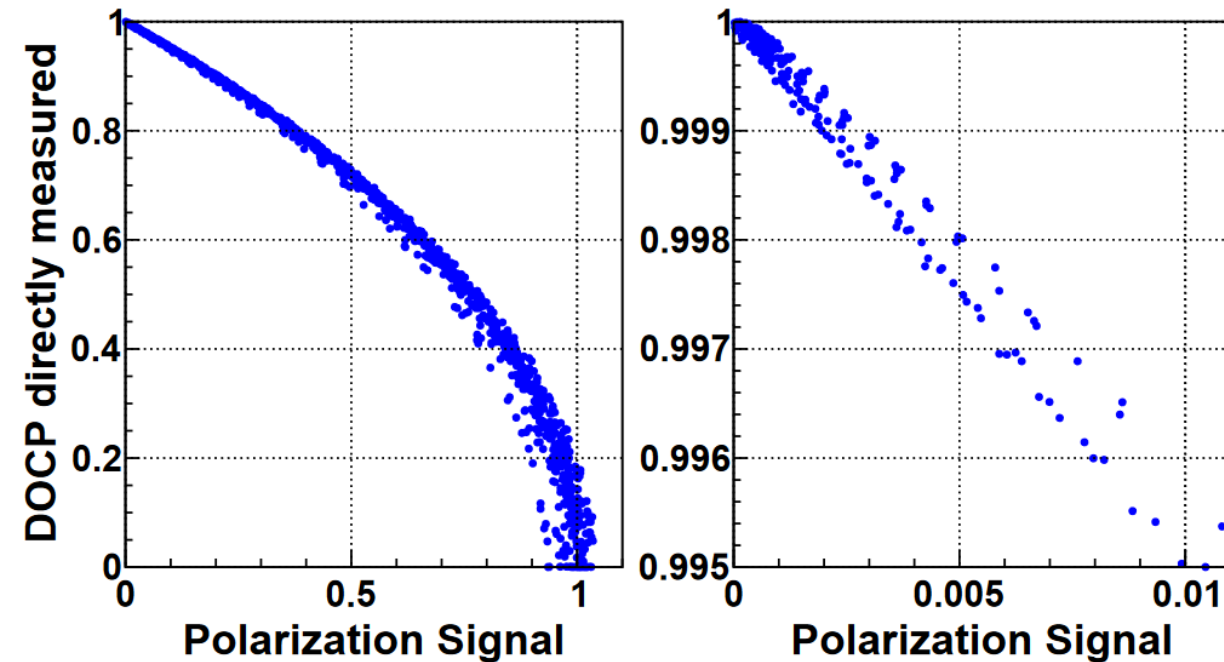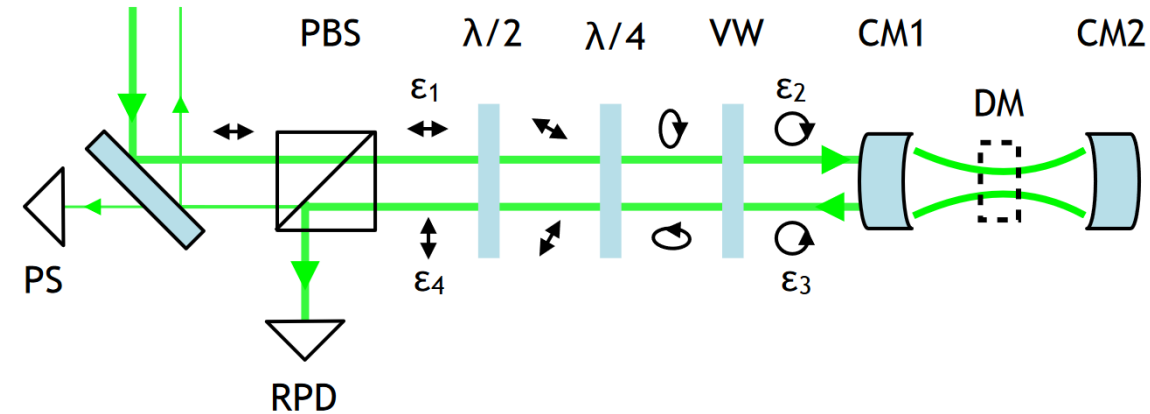


# Current design of EIC laser system

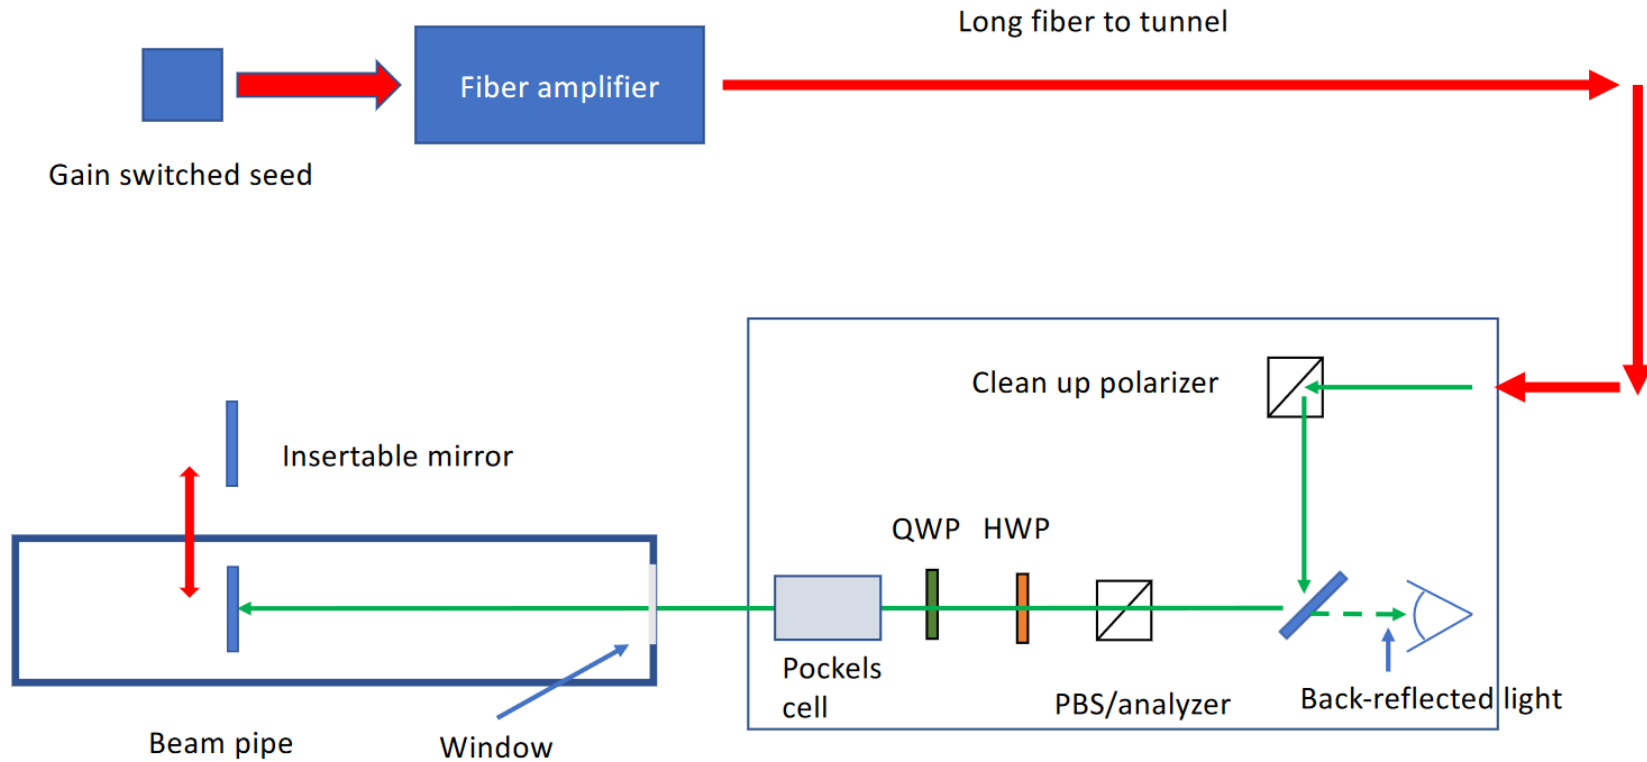

- The initial laser system design uses most of the design features highlighted in the previous Compton polarimeter implementations
  - As was before we need the laser system to be away from potential fatal radiation fields inside the tunnel (we plan to evaluate the use of high power laser fiber)
- The vacuum resident insertable mirror will be needed in order to be able to monitor the DOCP at the interaction point

# Gain switched seed

- The gain switched seed laser design developed at CEBAF for the injector satisfies all the requirements that we discussed so far
  - The RF lock allows us to synchronize to all or specific electron bunches
  - The pulse longitudinal width will be smaller than the electron bunch (allowing us to potentially measure the longitudinal polarization profile)
  - The PPLN or LBO crystal will allow us to frequency double the 1064nm light to 532
- The system has proven to be very reliable and has been adopted by other facilities (such as the Mainz Microtron)

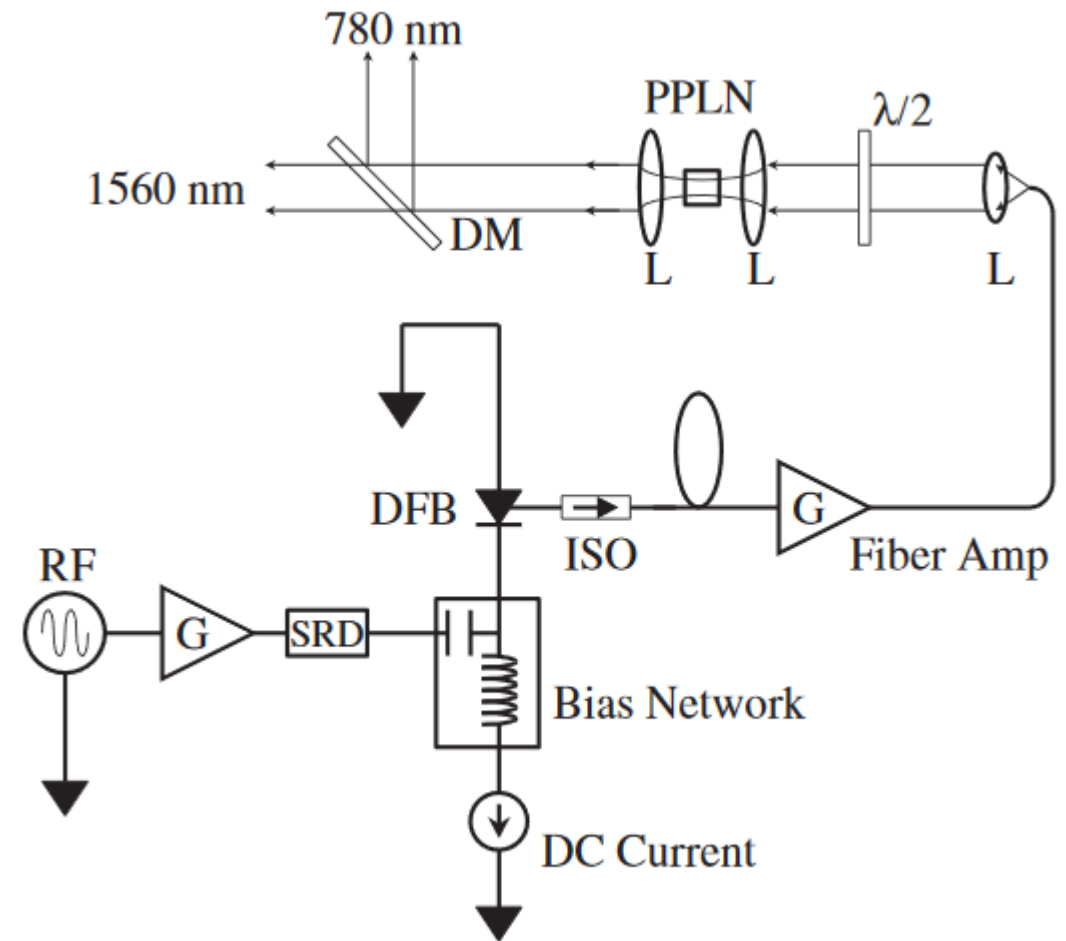

Phys. Rev. ST Accel. Beams **9**, 063501 (2006)

<https://journals.aps.org/prab/pdf/10.1103/PhysRevSTAB.9.063501>

# Project and Deliverables

Year 1

- Detail design of laser system
- Seed and preamp construction
  - Low power characterization

Year 2

- High power fiber amplifier
- Fiber delivery
- Frequency doubler
- Design vacuum system

Year 3

- Check 100% DOCP laser polarization through vacuum windows
- Remote control stages
- Picomotor controller
- Potential test at JLab
- Publish results

# Budget

Item	Cost[\$]
Seed: Laser diode	12000
Seed: Pulse driver	20000
Seed: Preamplifier	10000
Seed: Controllers	13000
Seed: Fiber optics	5000
<b>Gain switched seed and preamplifier total</b>	<b>60000</b>
Fiber power amplifier	45000
Single-mode fiber (20m)	5000
Frequency doubler	5000
<b>Total</b>	<b>115000</b>

Item	Cost[\$]
QWP (2)	1000
HWP	500
Pockels cell	2500
Polarizing cubes (3)	260
Mirrors (10)	700
Remote controlled stages (3)	10700
Picomotor controller (2)	3100
Assorted stands	2000
<b>Total</b>	<b>20760</b>

- The proposed system has two major components
  - The laser itself and fiber transport
  - The optics needed to prepare and characterize the laser polarization
- Labor to be provided by collaborative institutions with SBU taking the lead and JLab and UVa playing a technical supervisory role
  - 0.3 FTE C. Gal; 0.3 FTE CFNS/joint postdoc; 0.5 FTE SBU Master student for the first year

# Budget

Item	Cost[\$]
Seed: Laser diode	12000
Seed: Pulse driver	20000
Seed: Preamplifier	10000
Seed: Controllers	13000
Seed: Fiber optics	5000
<b>Gain switched seed and preamplifier total</b>	<b>60000</b>
Fiber power amplifier	45000
Single-mode fiber (20m)	5000
Frequency doubler	5000
<b>Total</b>	<b>115000</b>

Item	Cost[\$]
QWP (2)	1000
HWP	500
Pockels cell	2500
Polarizing cubes (3)	260
Mirrors (10)	700
Remote controlled stages (3)	10700
Picomotor controller (2)	3100
Assorted stands	2000
<b>Total</b>	<b>20760</b>

Year 1  
65k\$



Year 2  
57.5k\$





Year 3  
14k\$





# Summary and Challenges

- A Compton polarimeter is the ideal system to measure and monitor e-beam polarization
- The proposed system would satisfy all the requirements for the EIC Compton polarimeter and reach  $\sim 1\%$  uncertainties
  - The 10W laser power would be sufficient to obtain at least one collision per bunch crossing allowing us to make a fast measurement of each bunch
  - The variable frequency would allow for background measurements and systematic studies
  - The proposed optics elements would allow for the characterization and continuous monitoring of the laser polarization properties
  - The high power fiber transport will need to be tested in order to allow for a robust system

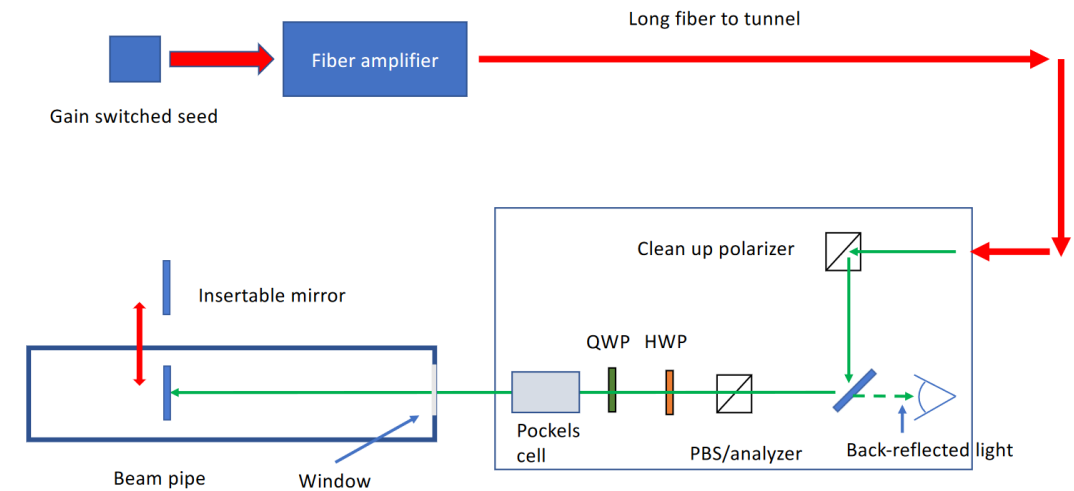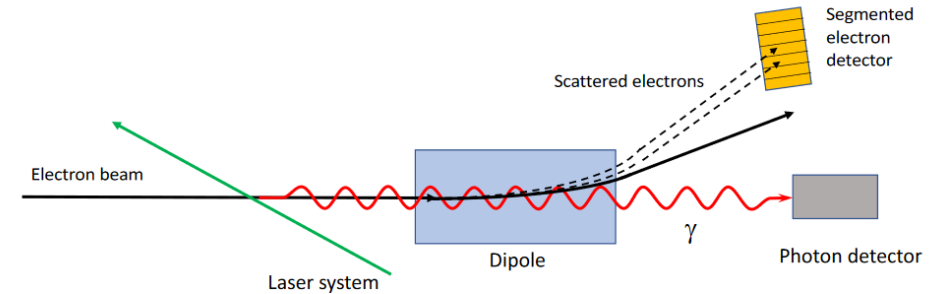


# Backup

# Layout at IP12

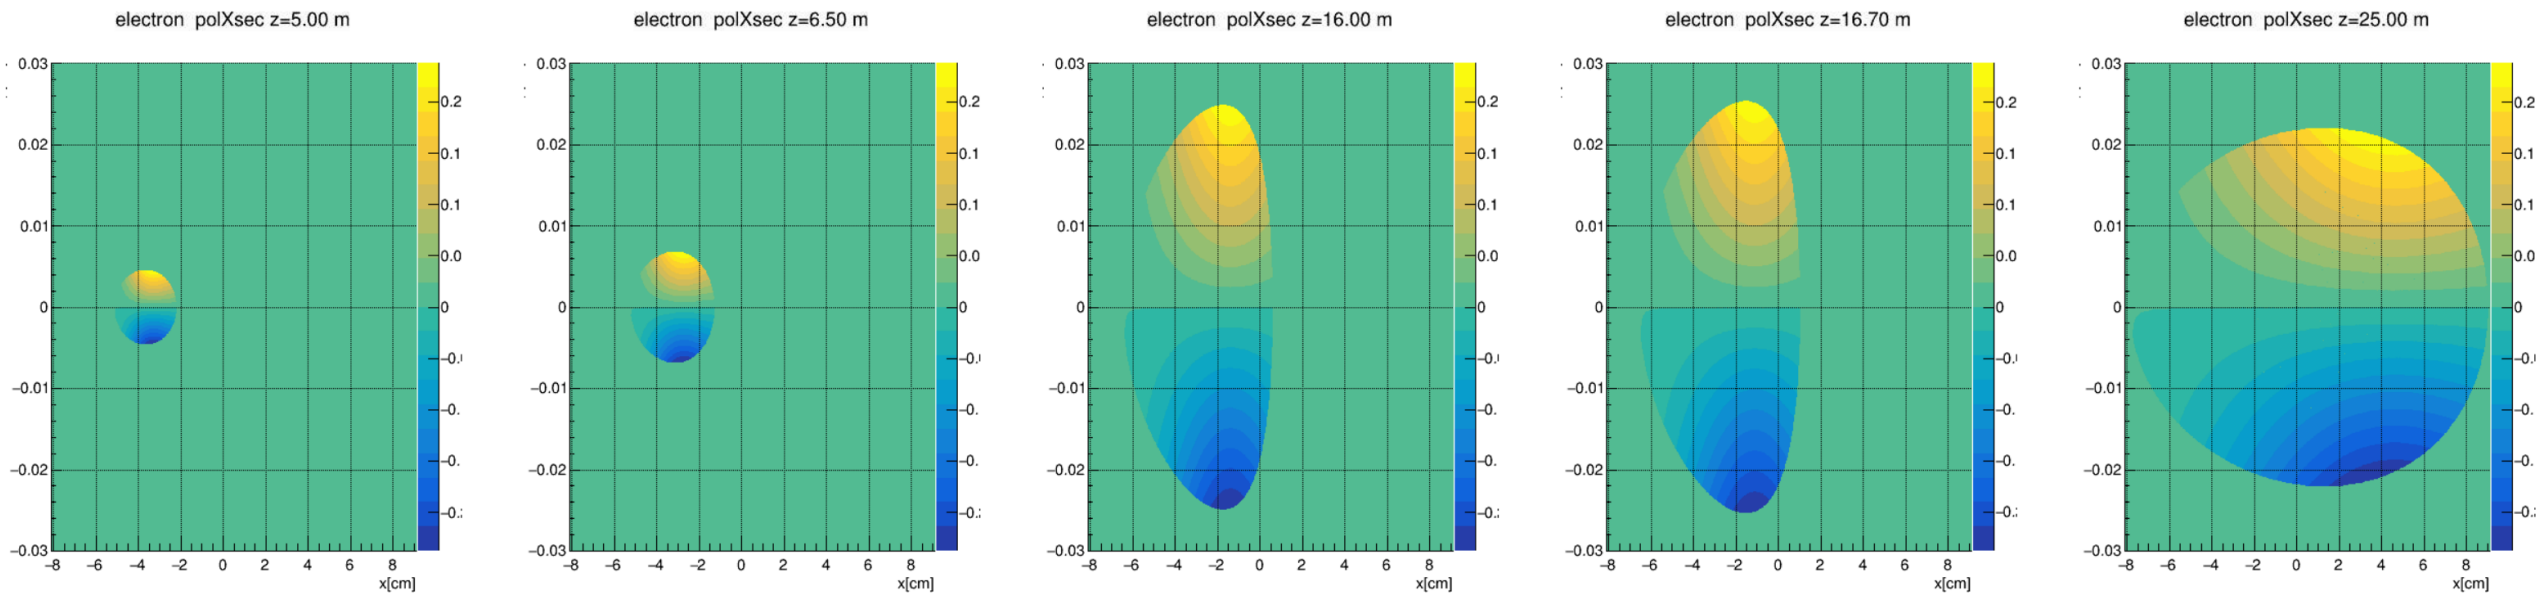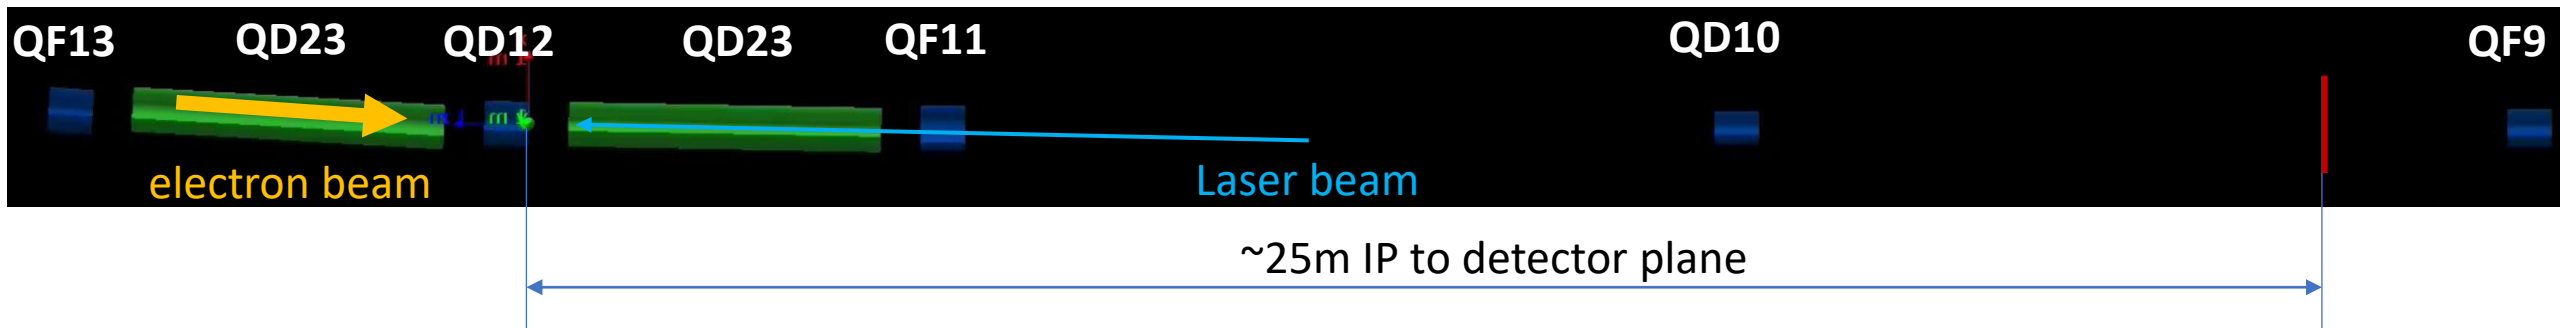

- As the scattered particles pass through the different magnets the electrons are stretched horizontally
- At the detector plane we can clearly see both the spatial and energy dependence


# Detector segmentation

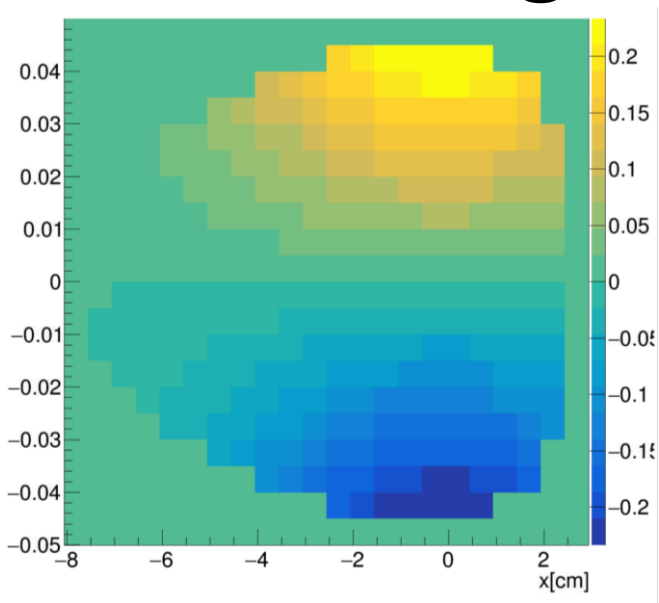

Input normalization: 73%

segmentation [um]	Extracted normalization
400	30.53
200	75.71
100	73.74
50	73.43
10	73.01
5	73.00


- By segmenting the simulated signal vertically and assigning an arbitrary normalization one can use the unbinned distribution to extract the normalization
- This rough analysis gives us a feel for what the vertical segmentation of the two detectors will need to be
  - For the photon detector a segmentation of better than 200 micron will be needed
  - The electron detector will require a 50 micron or better segmentation

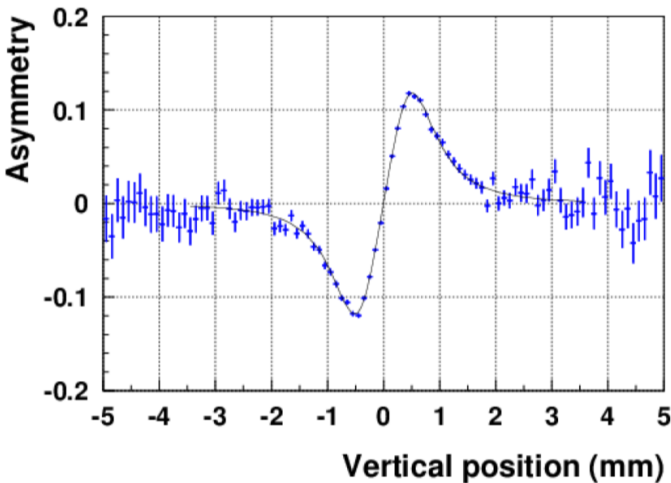

Input normalization: 85%

segmentation [um]	Extracted normalization
500	77.7
400	80.4
333.33	82.7
200	84.4
100	85.1
50	85.0

# Lasers as a function of wavelength

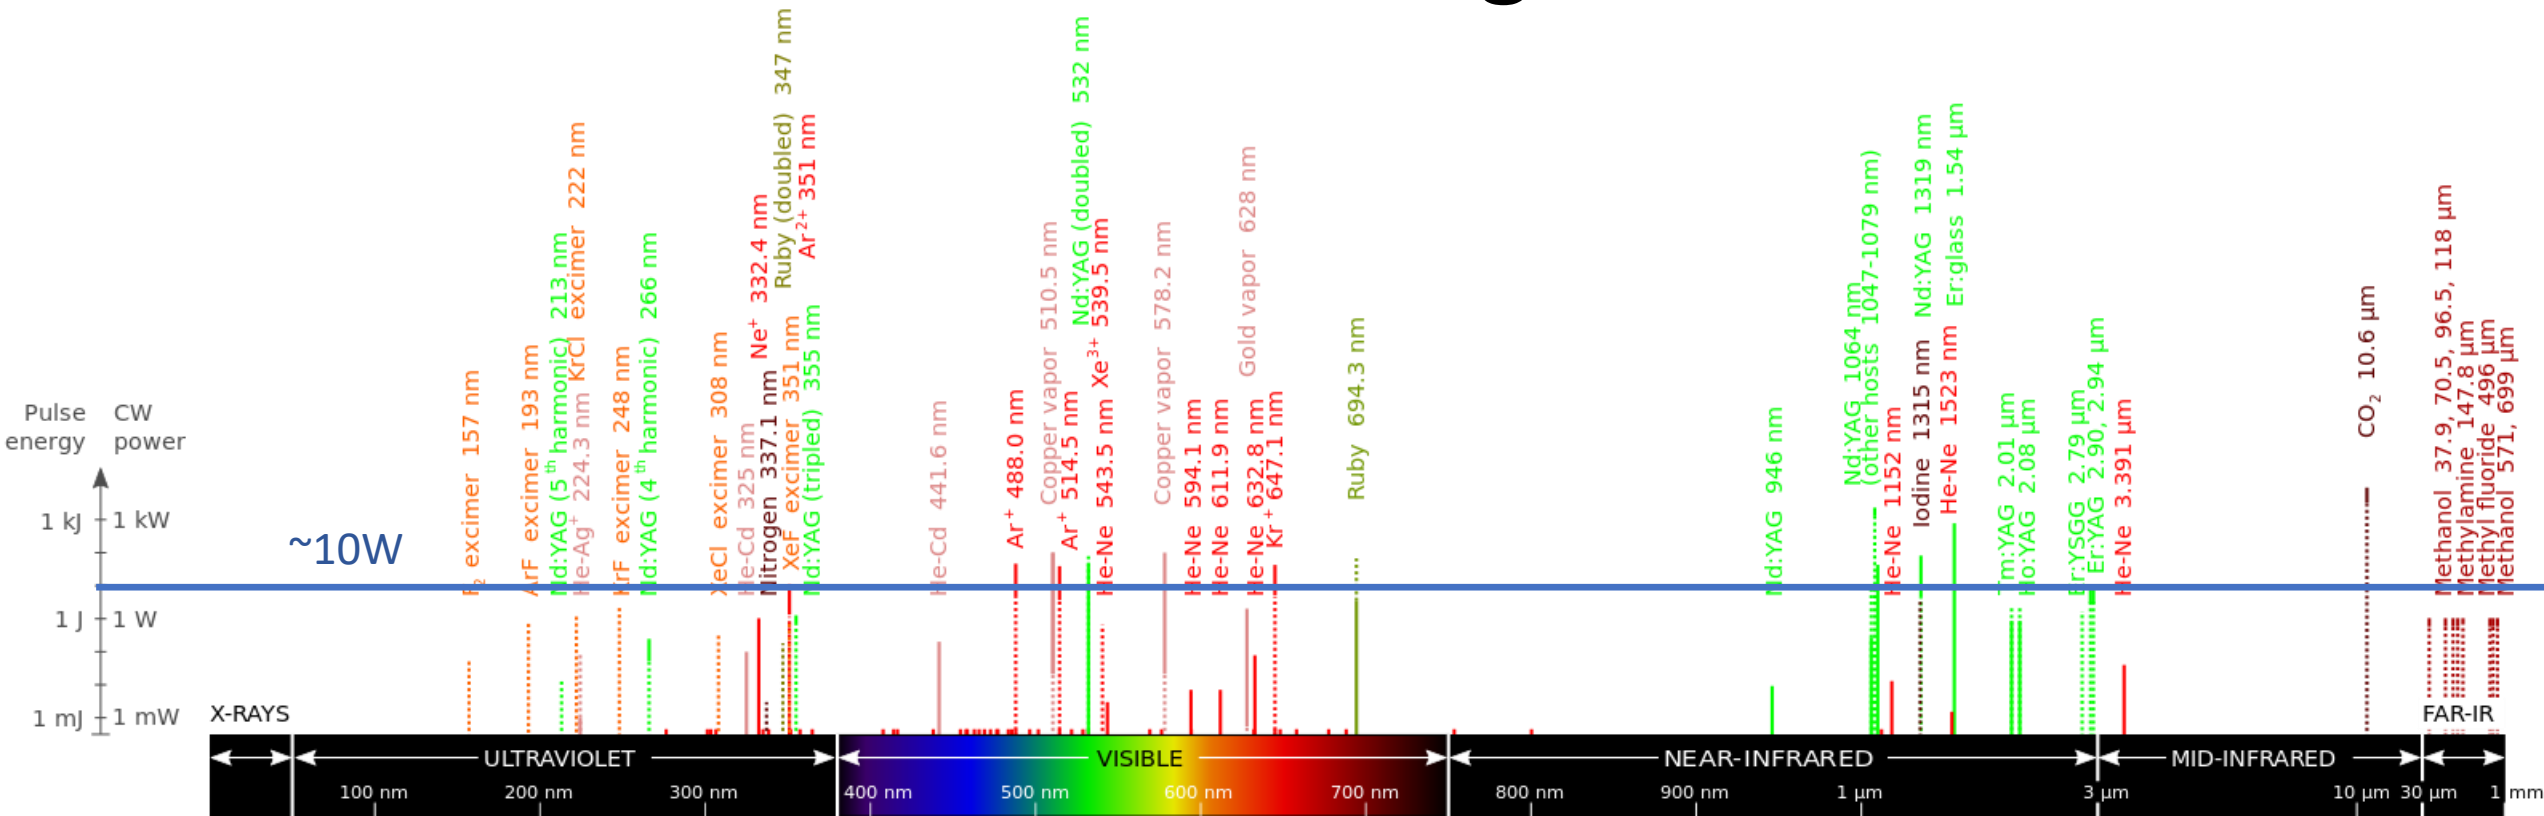

- When looking for a laser we need to take into account ease of setup and reliability
  - There is a good reason most Compton polarimeters used Nd:YAG lasers at their core
  - A low power Nd:YAG laser can be amplified quite readily to larger powers without much custom equipment
- Additionally we need to make sure we can have enough power from the laser to provide sufficient luminosity (few Watts of power will be needed)